




HELPFUL HINTS FOR USING SUPERIOR POLYESTERS TRAVERTINE FILLER AND OTHER POLYESTER FILLED ADHESIVES (INCLUDING BUFF KG, BUFF FLOWING, WHITE KG, WHITE FLOWING & BLACK KG)

- Mix ratio: Add 2%-4% hardener by volume to glue (*Rule of thumb: glue = golf ball / hardener = pea*)

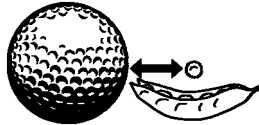

- Adding too much hardener can cause the glue to be too brittle.
- Adding too little hardener can cause the glue to be tacky
- After you have added the hardener, you have about 3-4 minutes to work with the adhesive
- The adhesive will be fully cured in about 20 minutes
- It is recommended to use disposable cups and disposable stir sticks while working with glue (*Hint: wooden tongue depressors work well as they are disposable and have a straight edge*)
- If possible, apply painters tape or masking tape to surrounding areas to limit the amount of glue being spread onto the rest of the stone
- These adhesives have little shrinkage (<1%) so you can fill holes level to the stone surface
- The cured adhesive can be polished or sanded to match the polished surface of the stone (*Hint: cured adhesive will be very hard so you can use diamond encrusted polishing pads to achieve polish*)
- For cleanup, it is recommended to use acetone following the safety precautions set forth by the acetone manufacturer
- These adhesives are designed for INDOOR use only and away from direct sunlight

